




INSTALLATION INSTRUCTIONS

Installing a DanceDeck Pro™ Floor

1. Start laying floor in upper left corner. All panels must be laid with aluminum splines in the top and left positions.
2. Depending on the floor, the floor tool may not be needed. If needed, place floor tool under the floor panel to the left of the panel being laid. This allows the panel to be lifted so the clips on the panel being installed slide into place more easily.
3. Slide panel being laid into place with clip sliding under panel on left.
4. If you encounter resistance, do not jump on floor to force panels into place. The problem could be a tight or bent clip, if so, bend clip back slightly.
5. To insure proper placement of edge pieces it is important to start with a corner set. Please note: once corner set is placed properly you will notice that edge pieces are placed in the middle of the two panels.

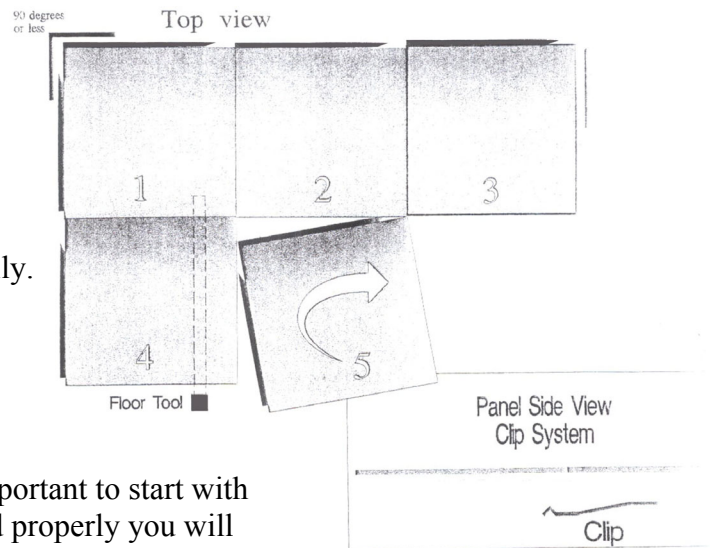

Tip The top row and left column must be at 90 degrees or less. If this is more than 90 degrees, you will experience problems laying the last few sections of the floor.

Disassembling a DanceDeck Pro Floor

1. To disassemble floor, start by removing the bottom right panel. Using a firm grip on the bottom of the left corner of the panel, pull hard with a snapping motion.
2. Once loose, while pulling down with your left hand, push in with your right hand on the top right of the panel to clear the connection system. Keep panel level, do not pull up on the panel as that may damage or bend splines.

Storage and Maintenance

Tip It is advisable to clean your floor after each use to prevent a build up of dirt. Start by using a dry mop to remove loose debris and if required, use a lightly damp cloth for general cleaning. For harder stains such as ink, gum or spills use denatured alcohol.

Floor sections should be stored standing up (on their side), wood-to-wood and metal-to-metal, on the DanceDeck Pro transport cart.

Tip Sections should be stored completely dry and indoors in a climate-controlled location. Exposure to extreme temperature variations should be avoided. Do not leave outdoors overnight.

We thank you for choosing DanceDeck Pro for your portable flooring needs.



Signature (Fencing & Flooring) Systems, LLC
50 East 42nd Street • Suite 1400
New York, NY 10017

Toll Free: 800-569-2751 • 212-953-1116 • Fax: 212-953-1117

Flooring: www.eventdeck.com • Fencing: www.signaturefencing.com